




Historical Concentration versus Time Graphs

Legend
Lockheed Martin Tallevast Site
Tallevast, Florida

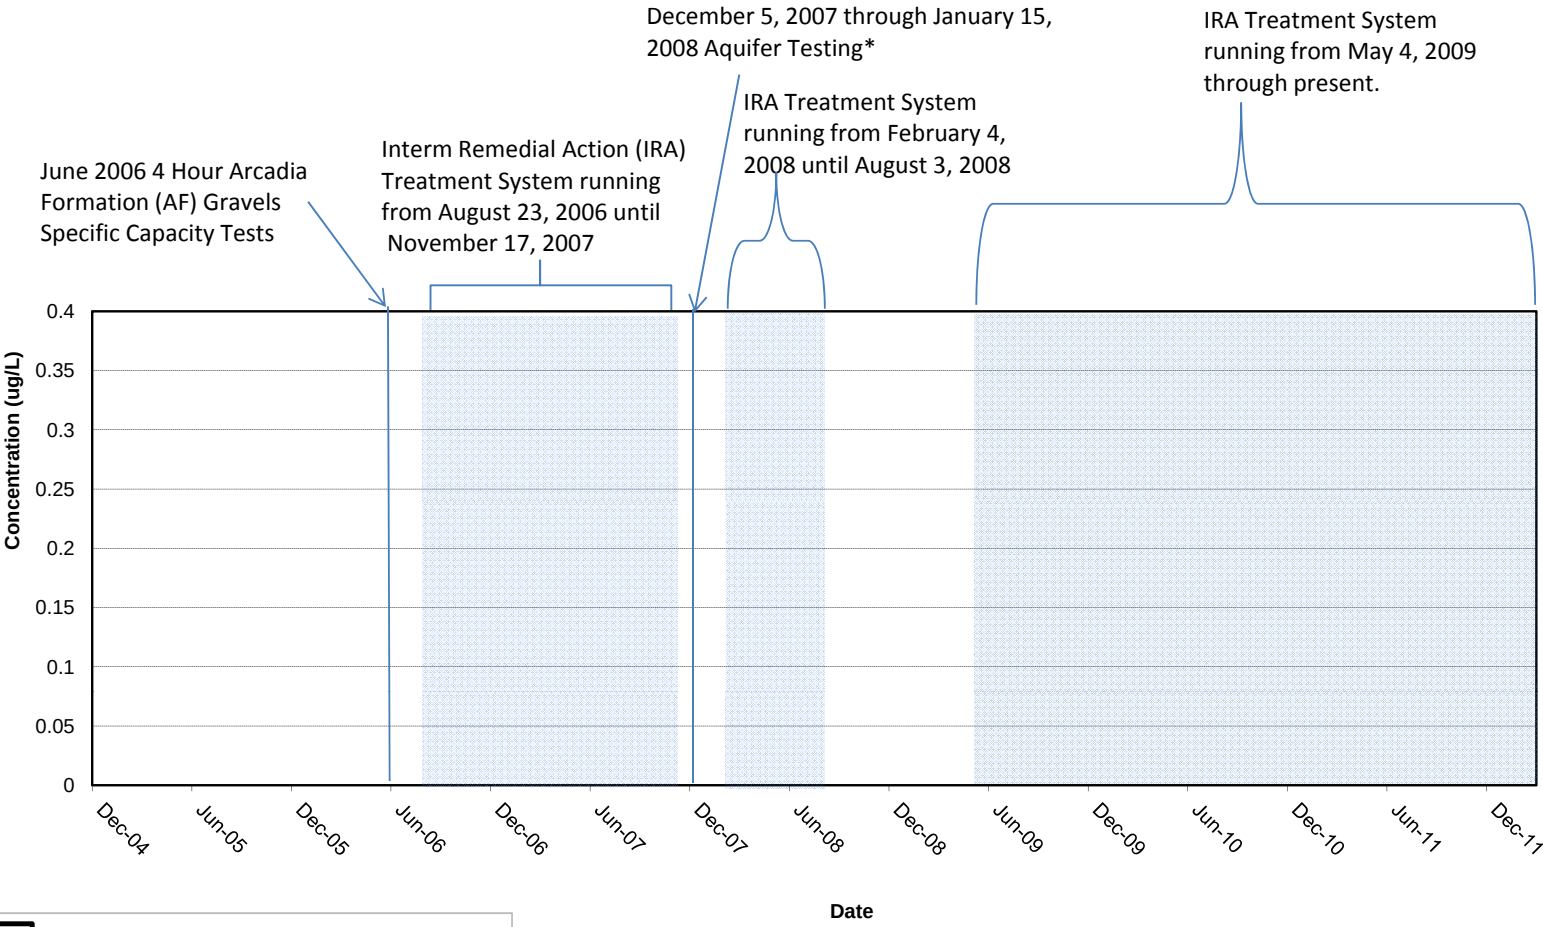

* Aquifer testing consisted of slug tests , specific capacity tests, 7-day EW-UAFG-1 AF Gravels extraction well pumping test, and 24-hour pumping tests. System was running intermittently.

Historical Concentration versus Time Graphs
Quarterly USAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

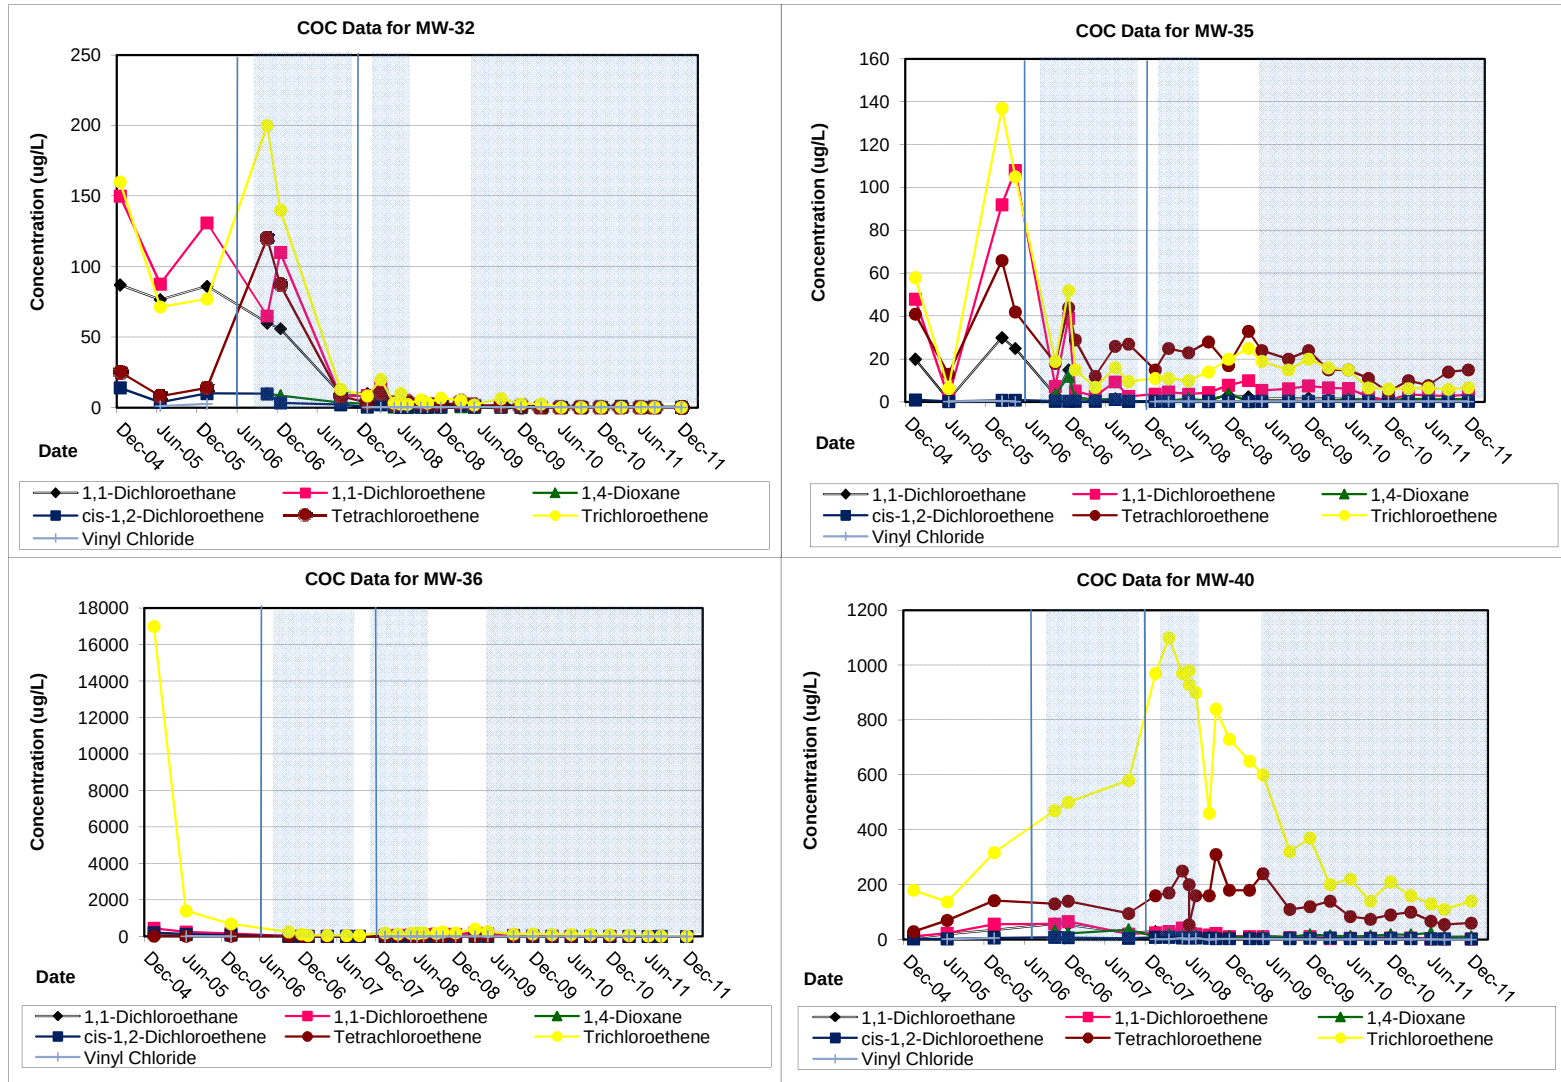


Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.

Historical Concentration versus Time Graphs
Quarterly USAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

Page 2 of 4

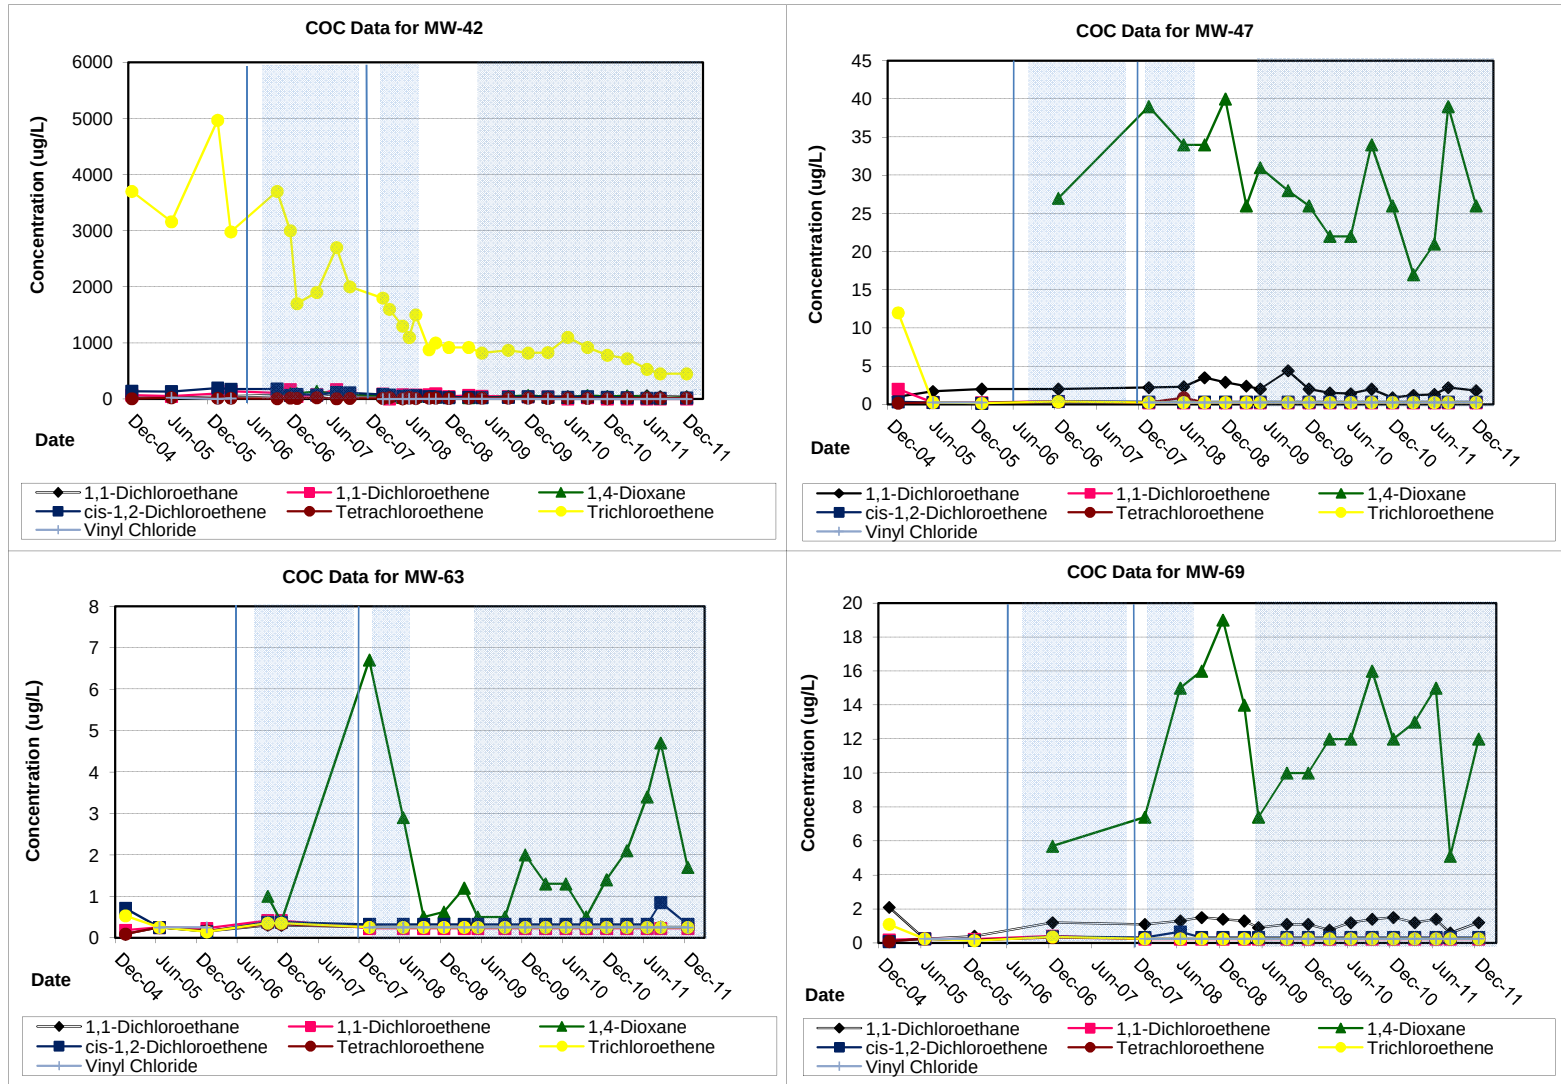


Notes:


Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.

Historical Concentration versus Time Graphs
Quarterly USAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

Page 3 of 4

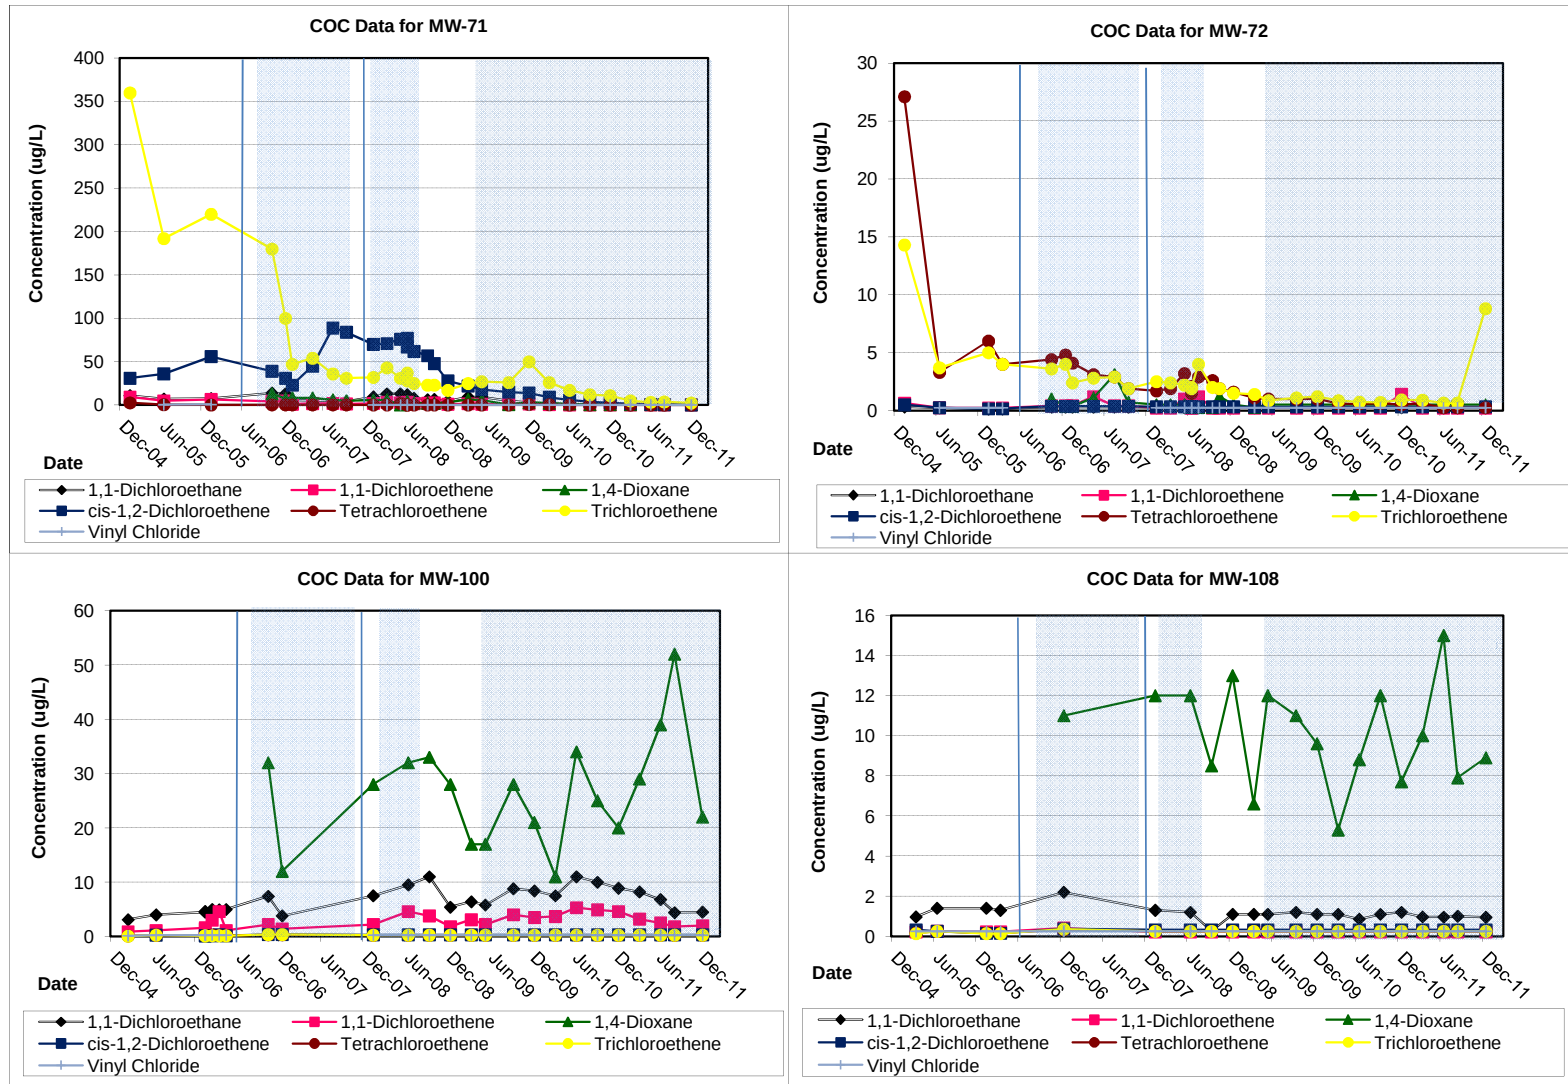


Historical Concentration versus Time Graphs
Quarterly USAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

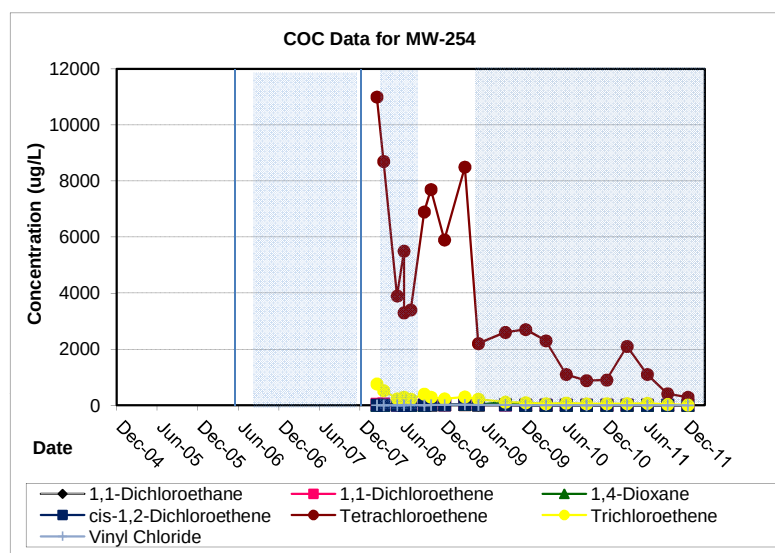

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
Blue line indicate aquifer testing pumping events.
See Legend for details.


Historical Concentration versus Time Graphs
Quarterly USAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

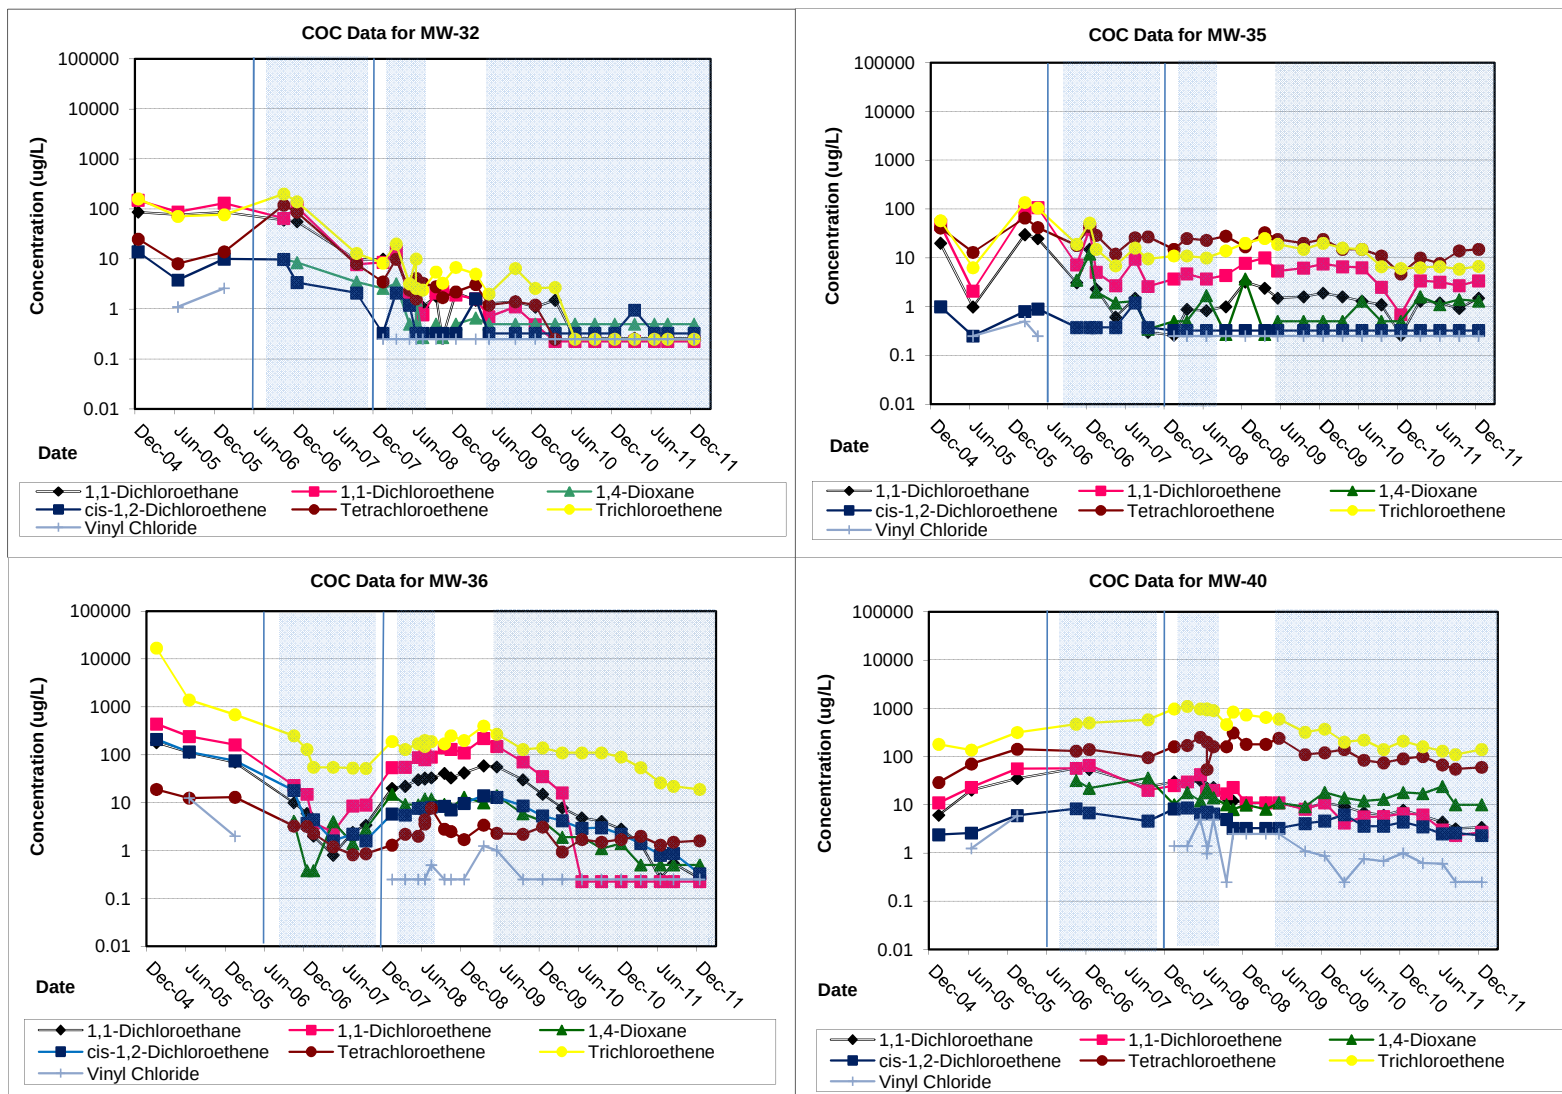

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.


Historical Concentration versus Time Graphs
Quarterly USAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

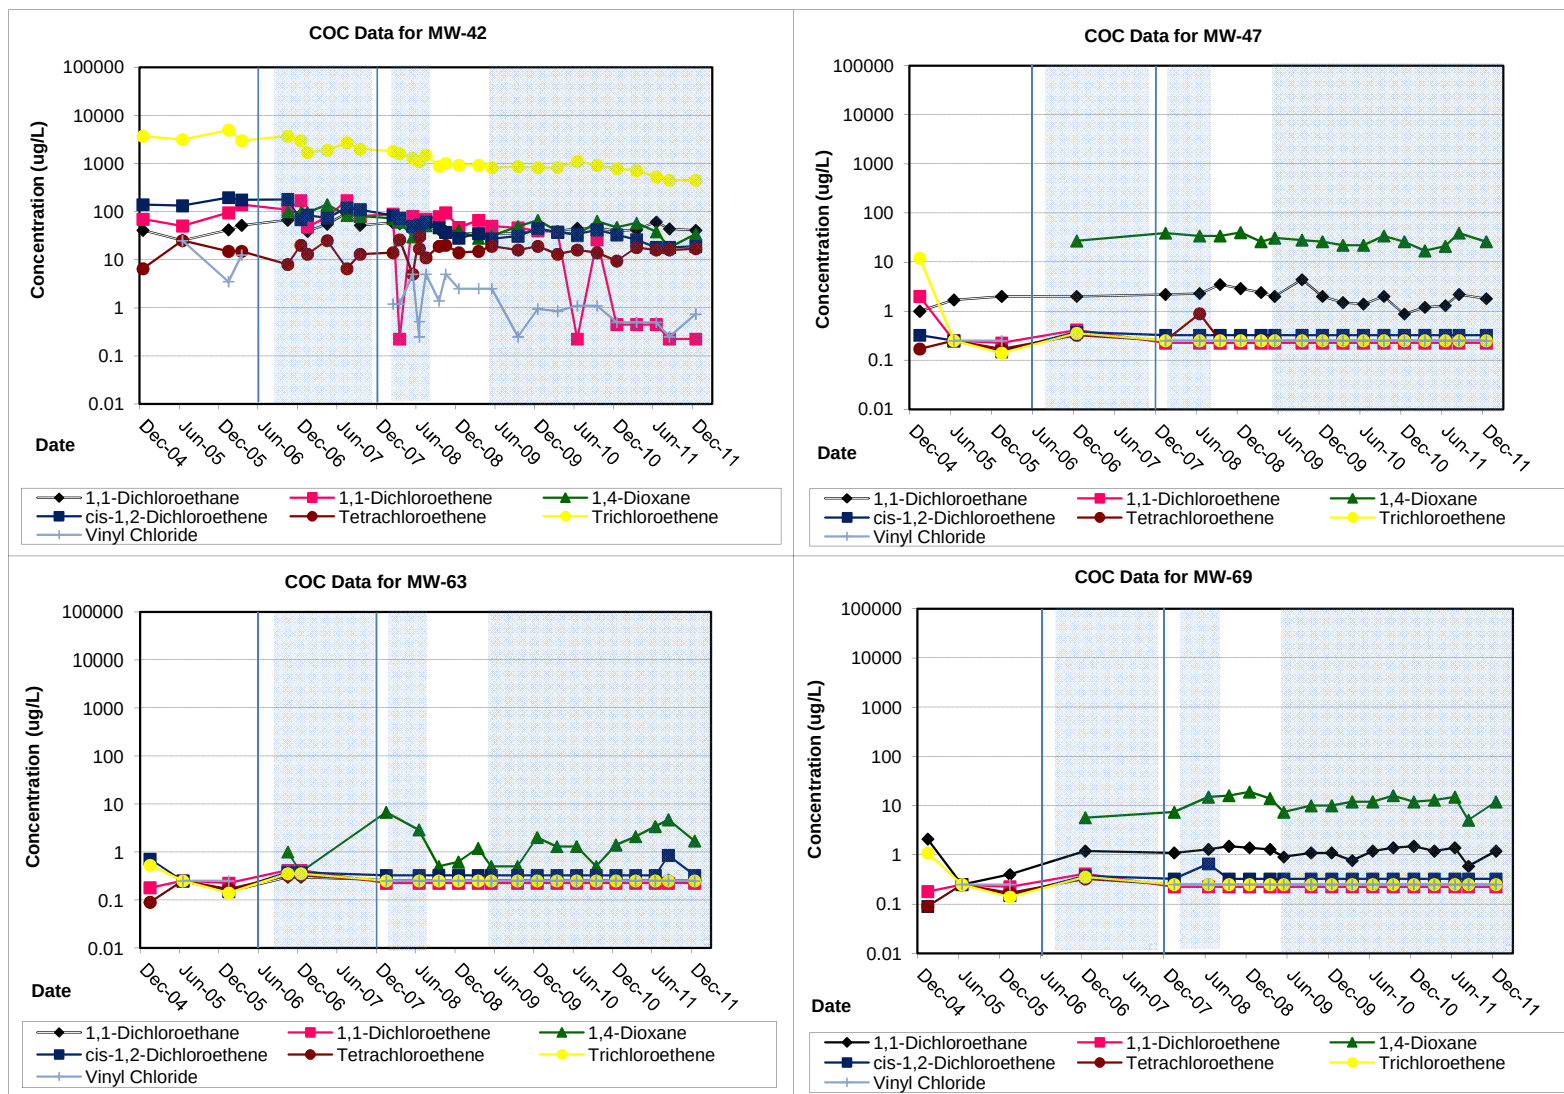

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
Blue line indicate aquifer testing pumping events.
See Legend for details.

Historical Concentration versus Time Graphs
Quarterly USAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

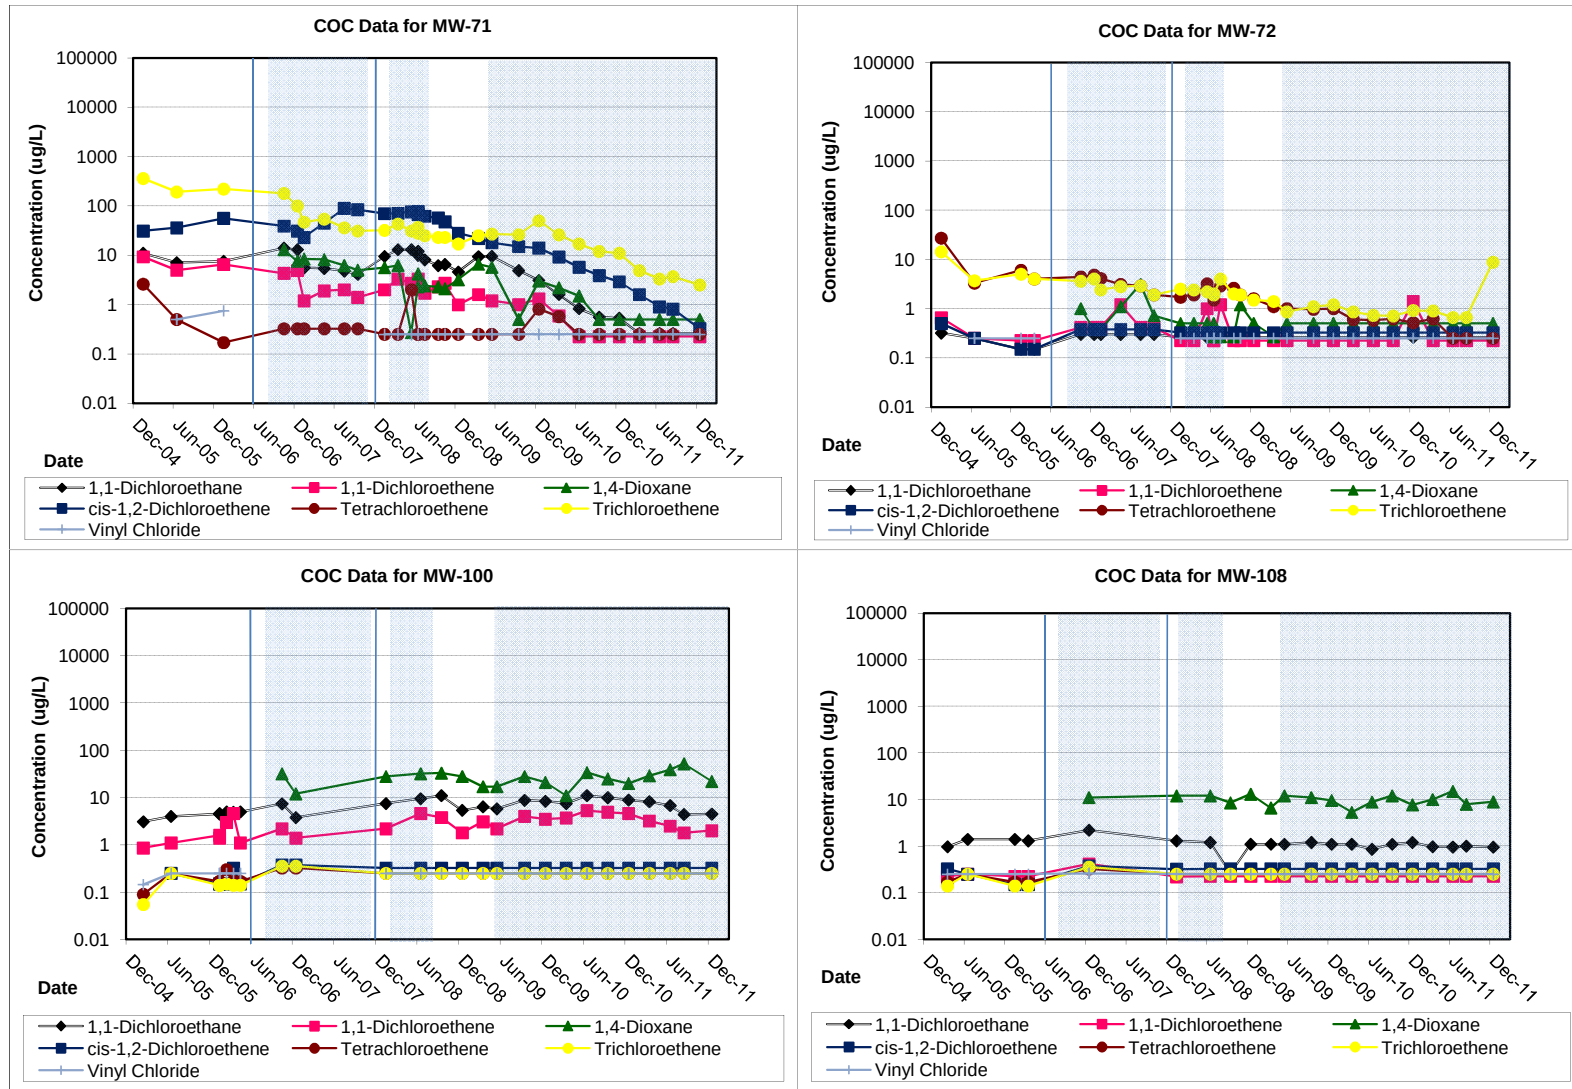


Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.

Historical Concentration versus Time Graphs
Quarterly USAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida


Page 4 of 4

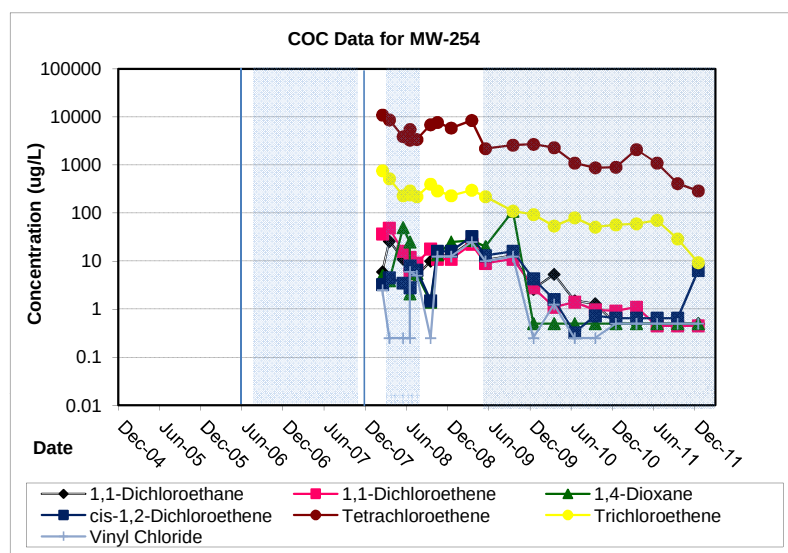

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
Blue line indicate aquifer testing pumping events.
See Legend for details.

Historical Concentration versus Time Graphs
Quarterly LSAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

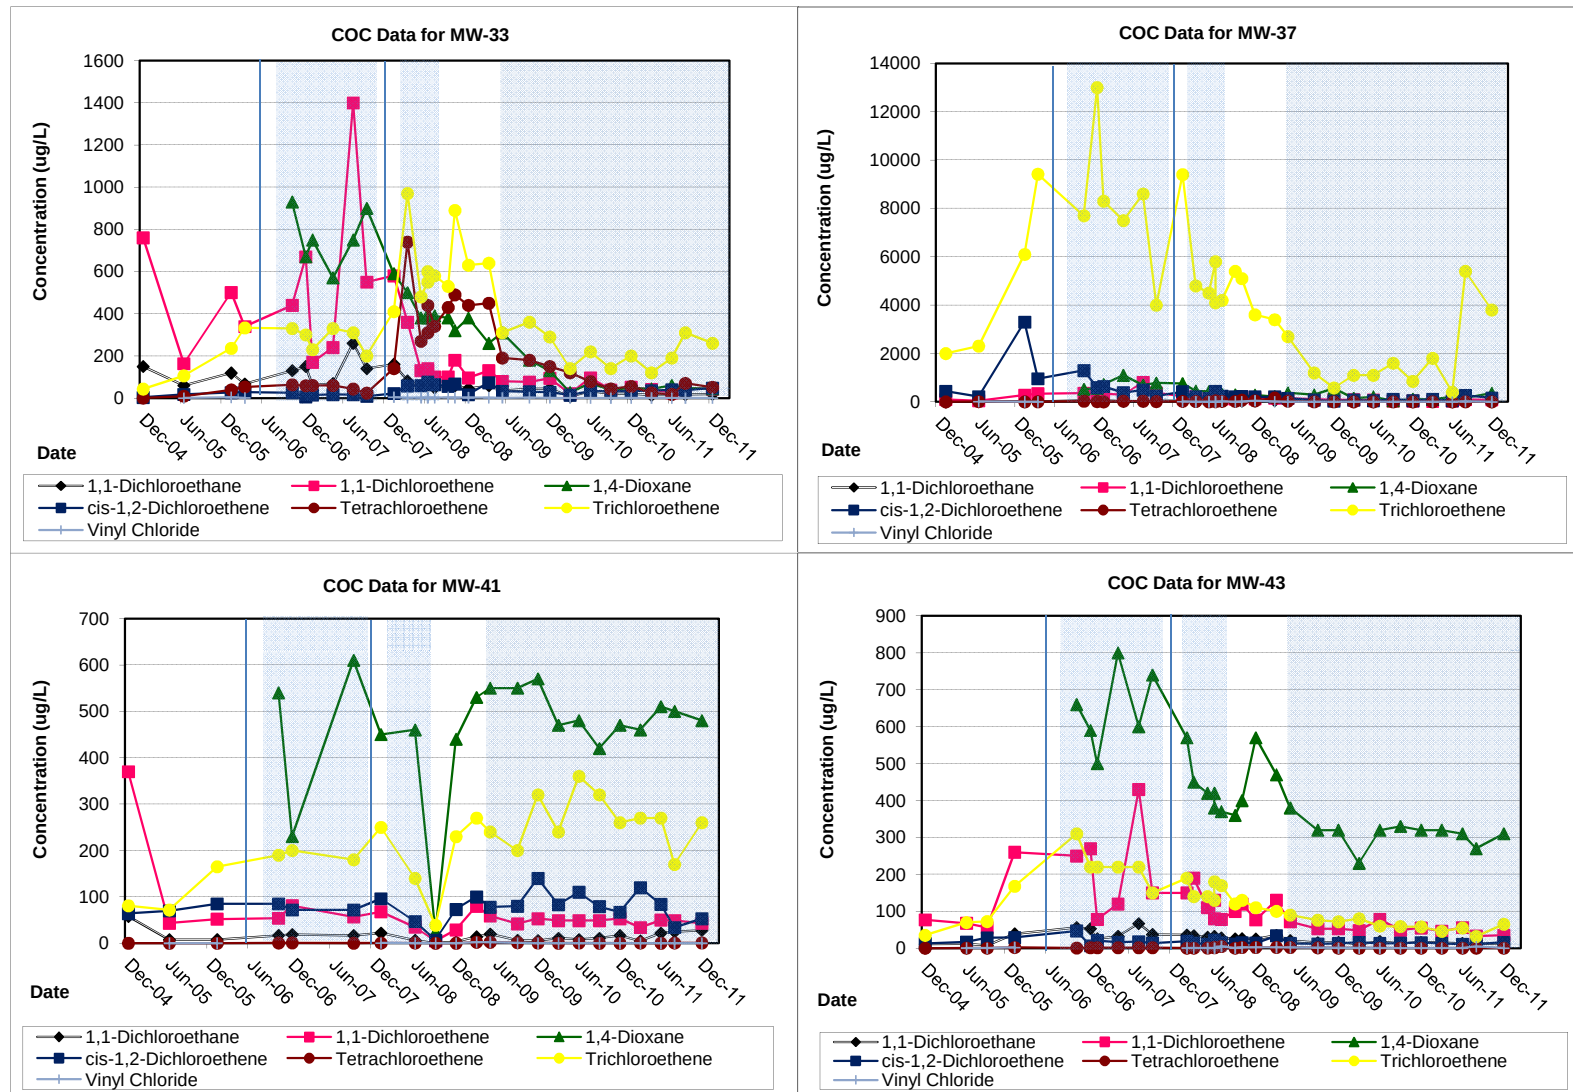


Notes:

Blue shading indicates time periods that the IRA treatment system was operating.

Blue line indicate aquifer testing pumping events.

See Legend for details.


Historical Concentration versus Time Graphs
Quarterly LSAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

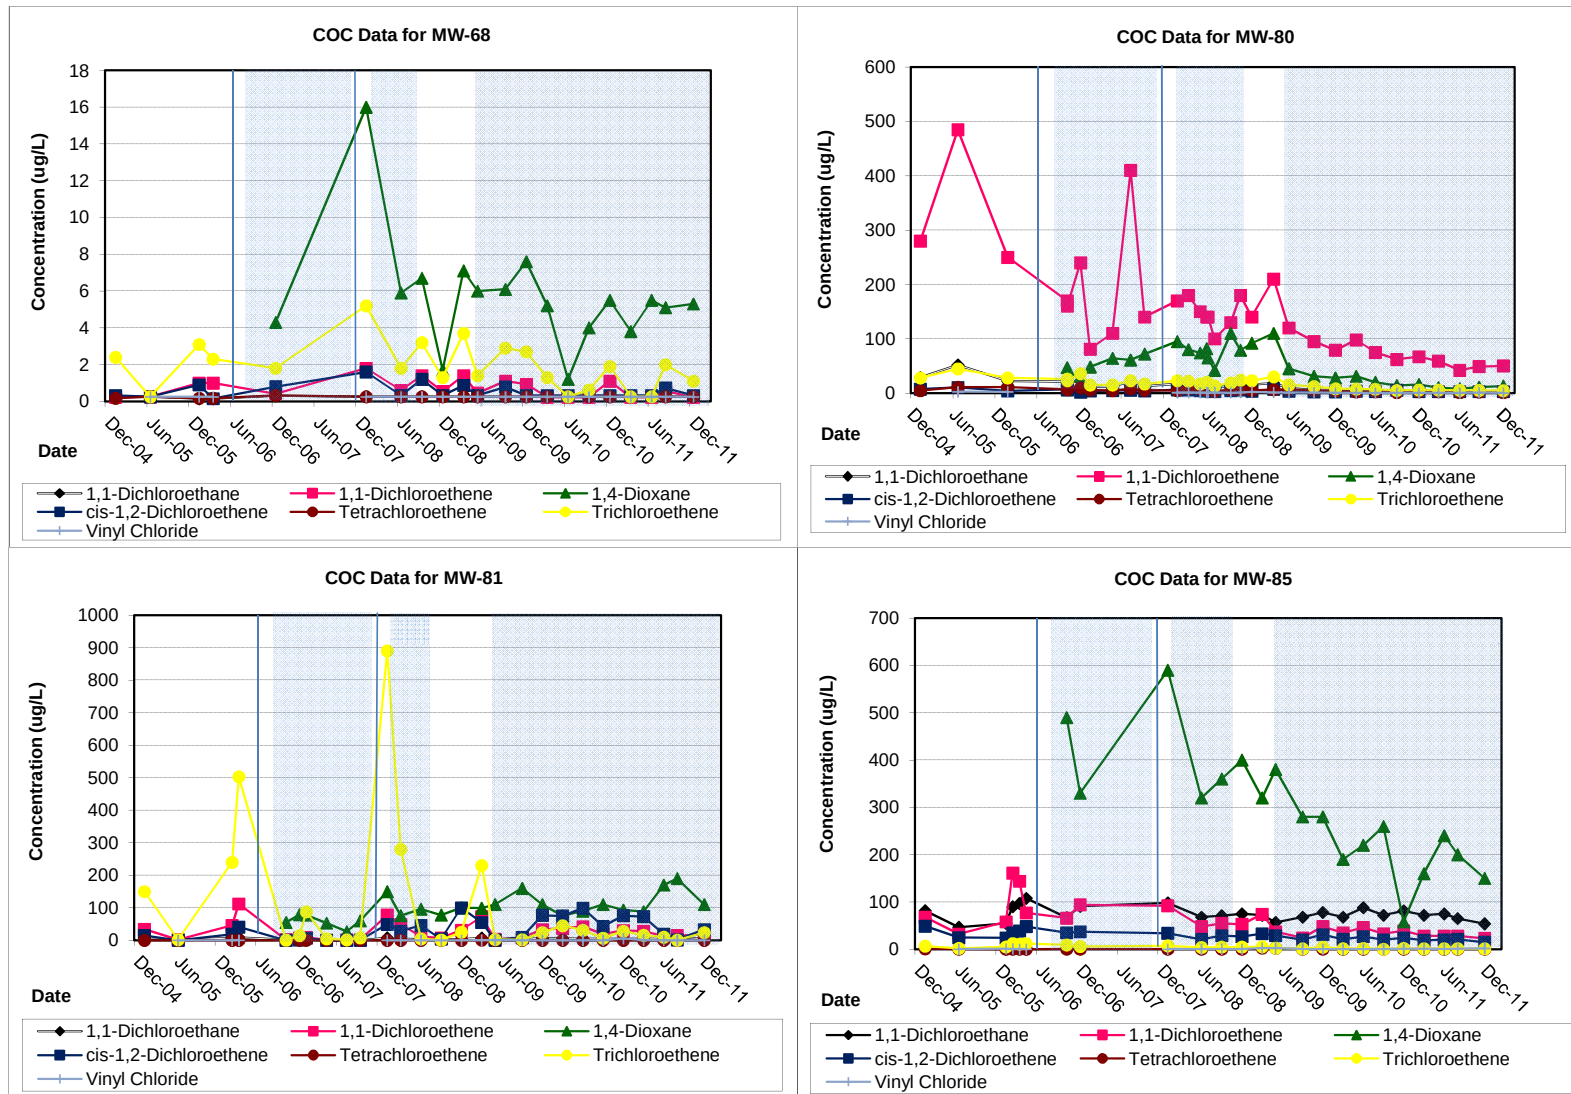

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.


Historical Concentration versus Time Graphs
Quarterly LSAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

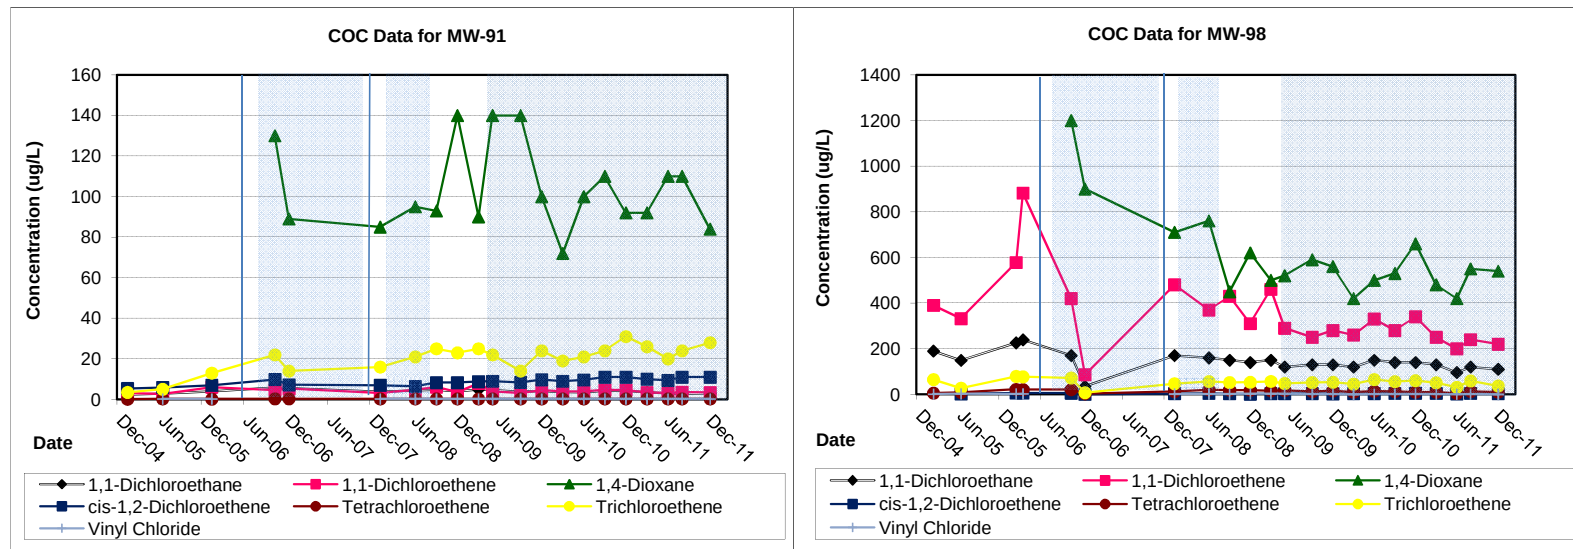

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.

Historical Concentration versus Time Graphs
Quarterly LSAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

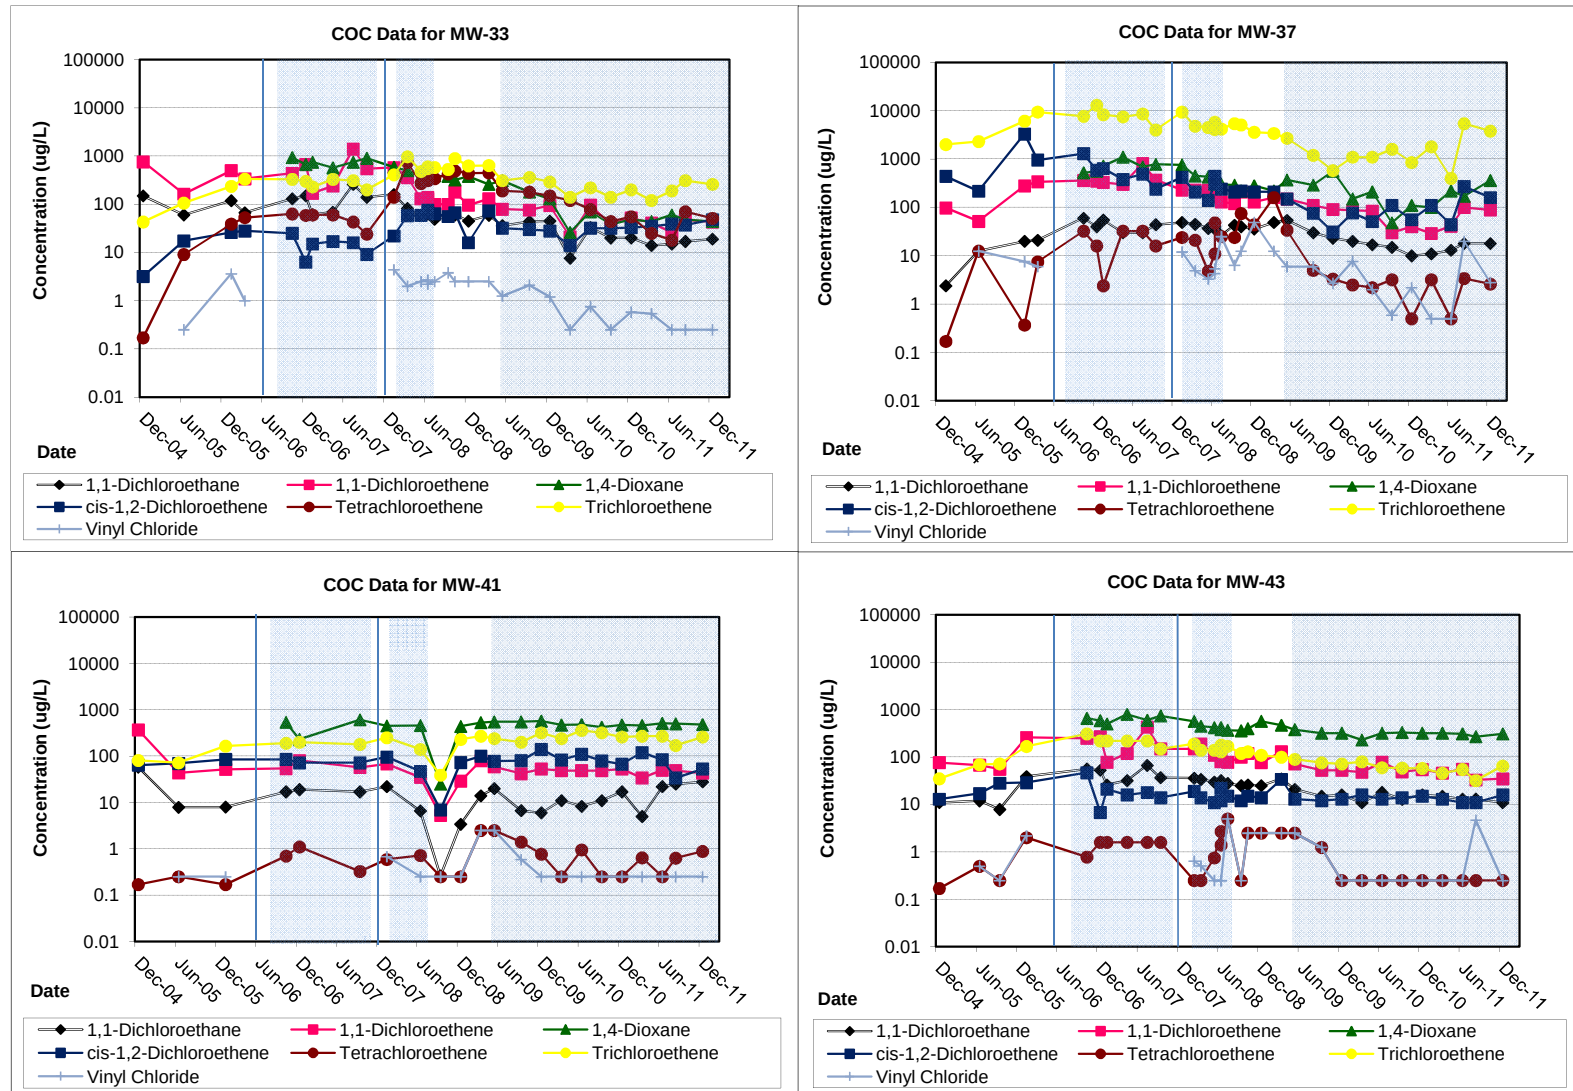


Notes:

Blue shading indicates time periods that the IRA treatment system was operating.

Blue line indicate aquifer testing pumping events.

See Legend for details.


Historical Concentration versus Time Graphs
Quarterly LSAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

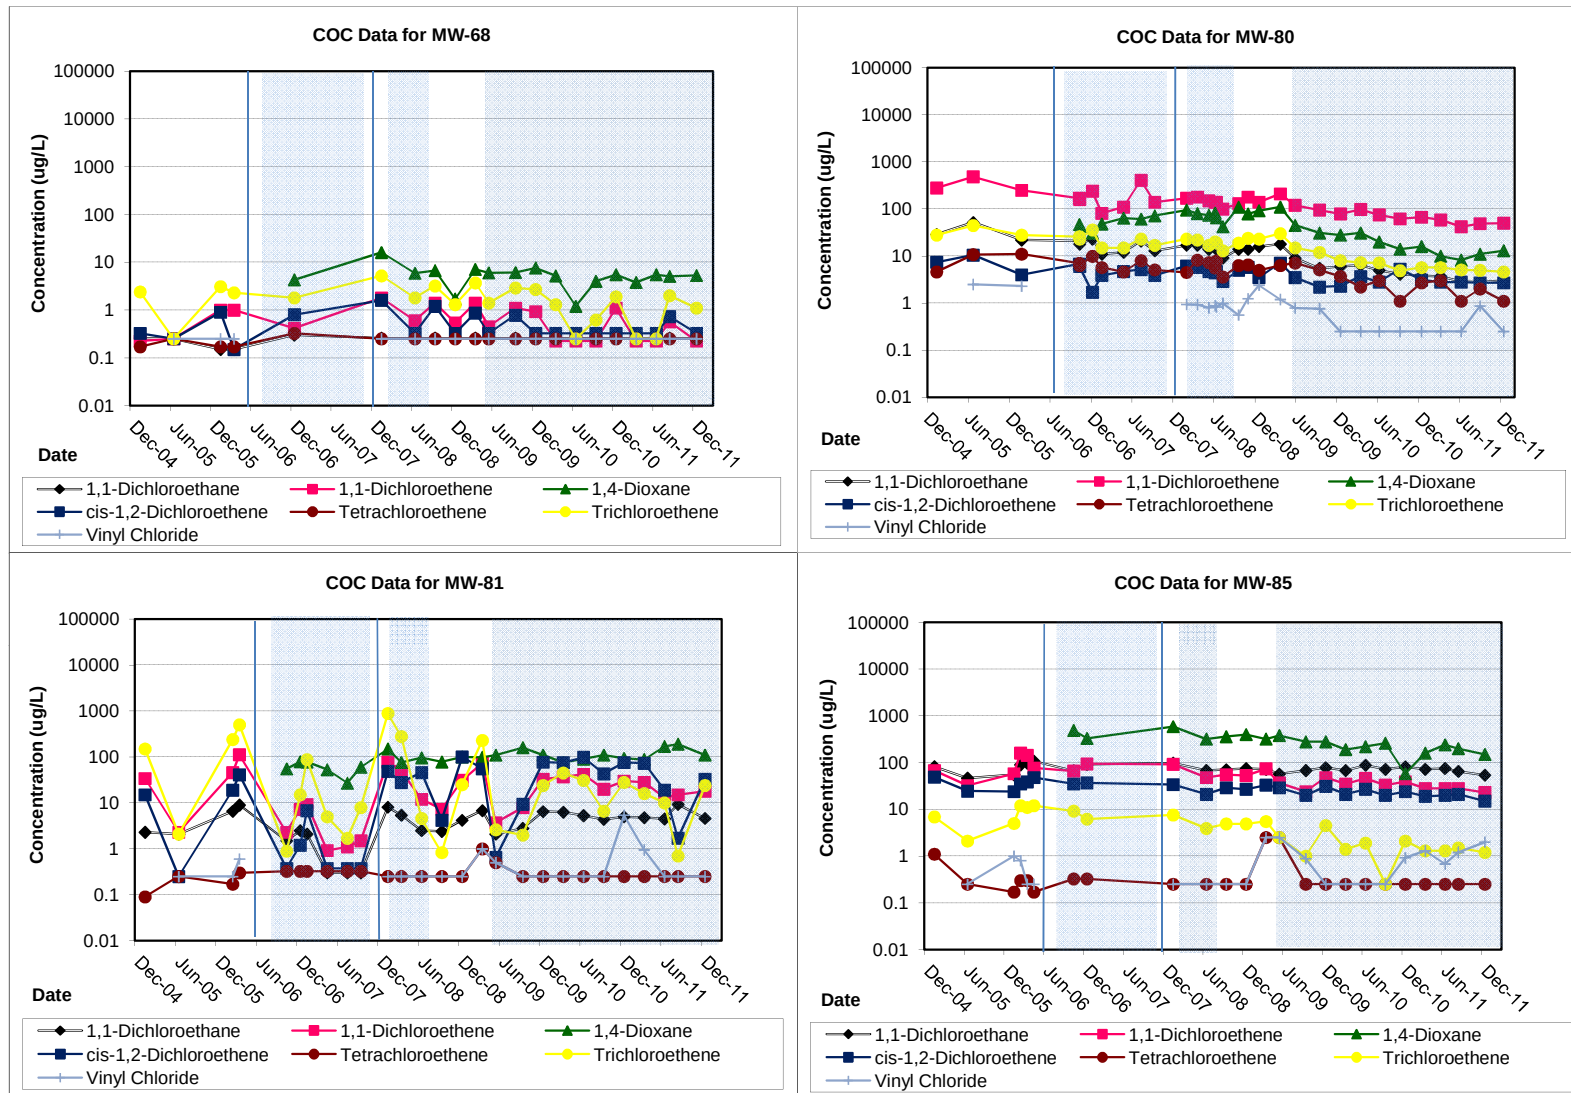

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.


Historical Concentration versus Time Graphs
Quarterly LSAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

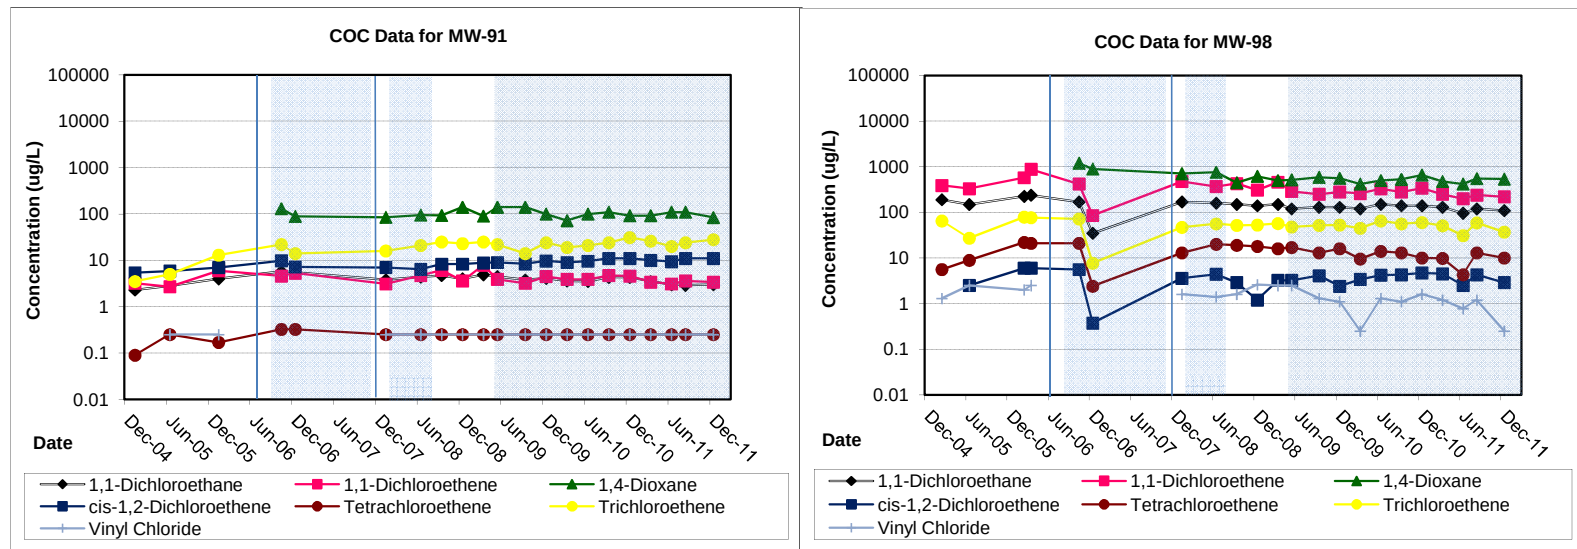

Notes:


Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.

Historical Concentration versus Time Graphs
Quarterly IAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

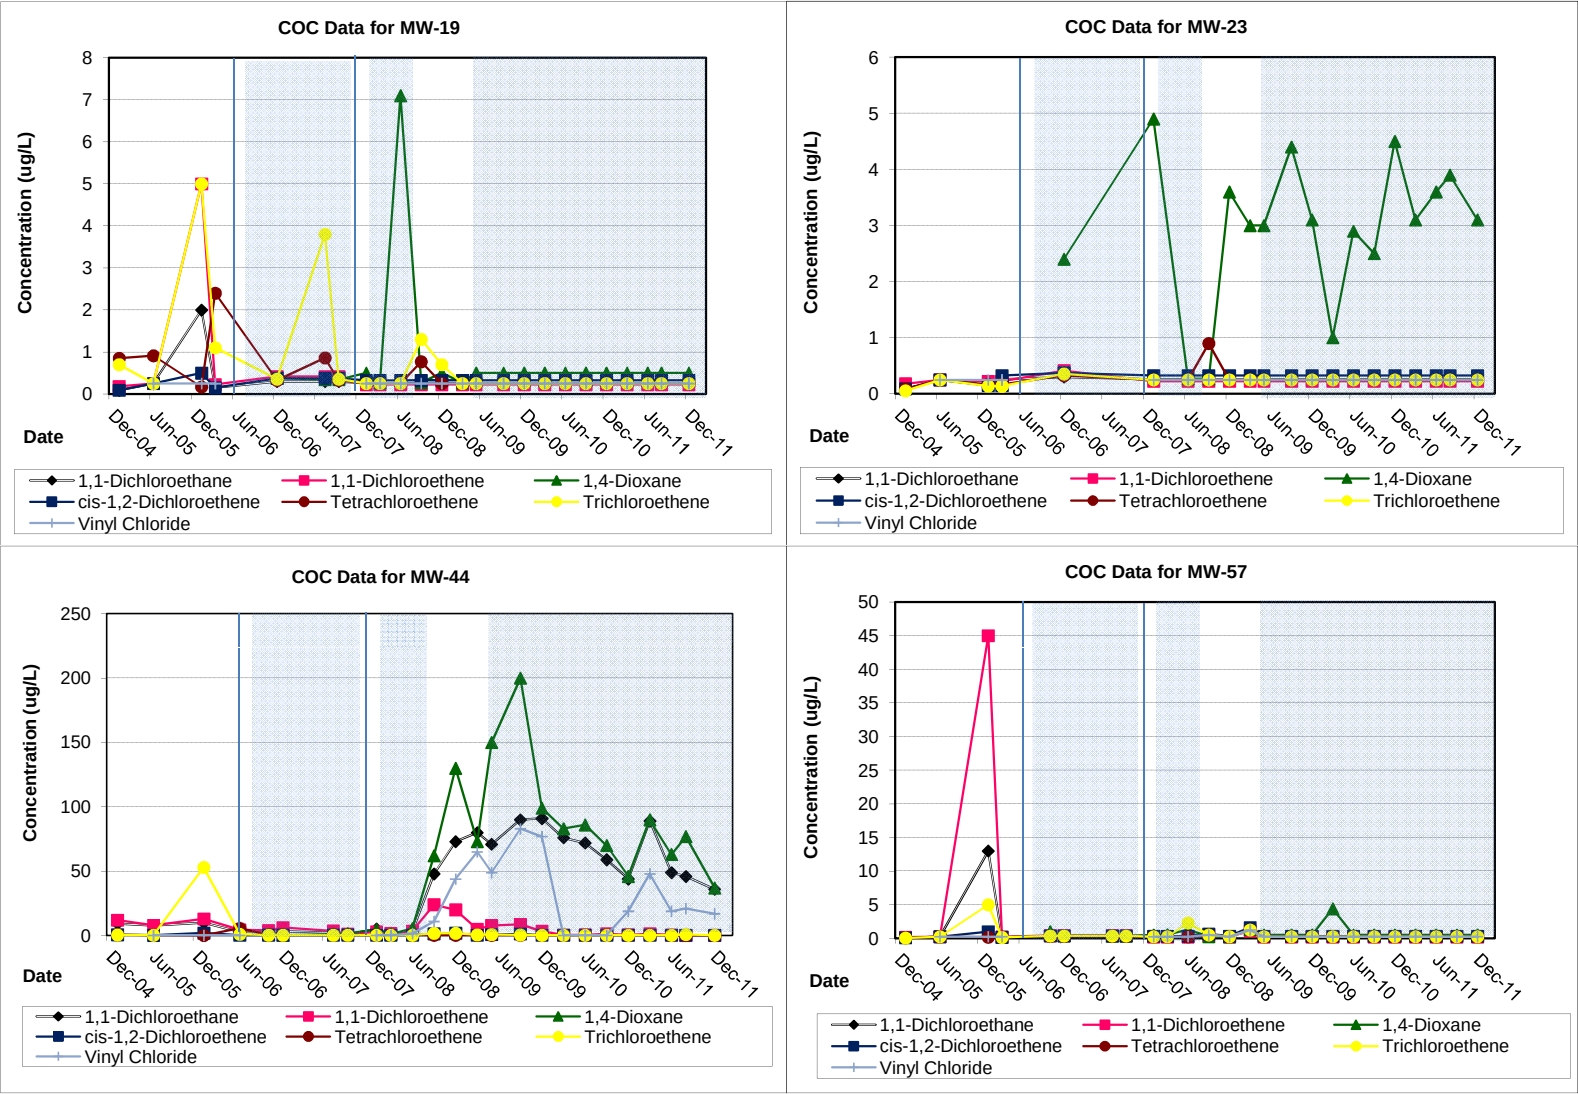

Notes:
Blue shading indicates time periods that the IRA treatment system was operating.
Blue line indicate aquifer testing pumping events.
See Legend for details.


Historical Concentration versus Time Graphs
Quarterly IAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

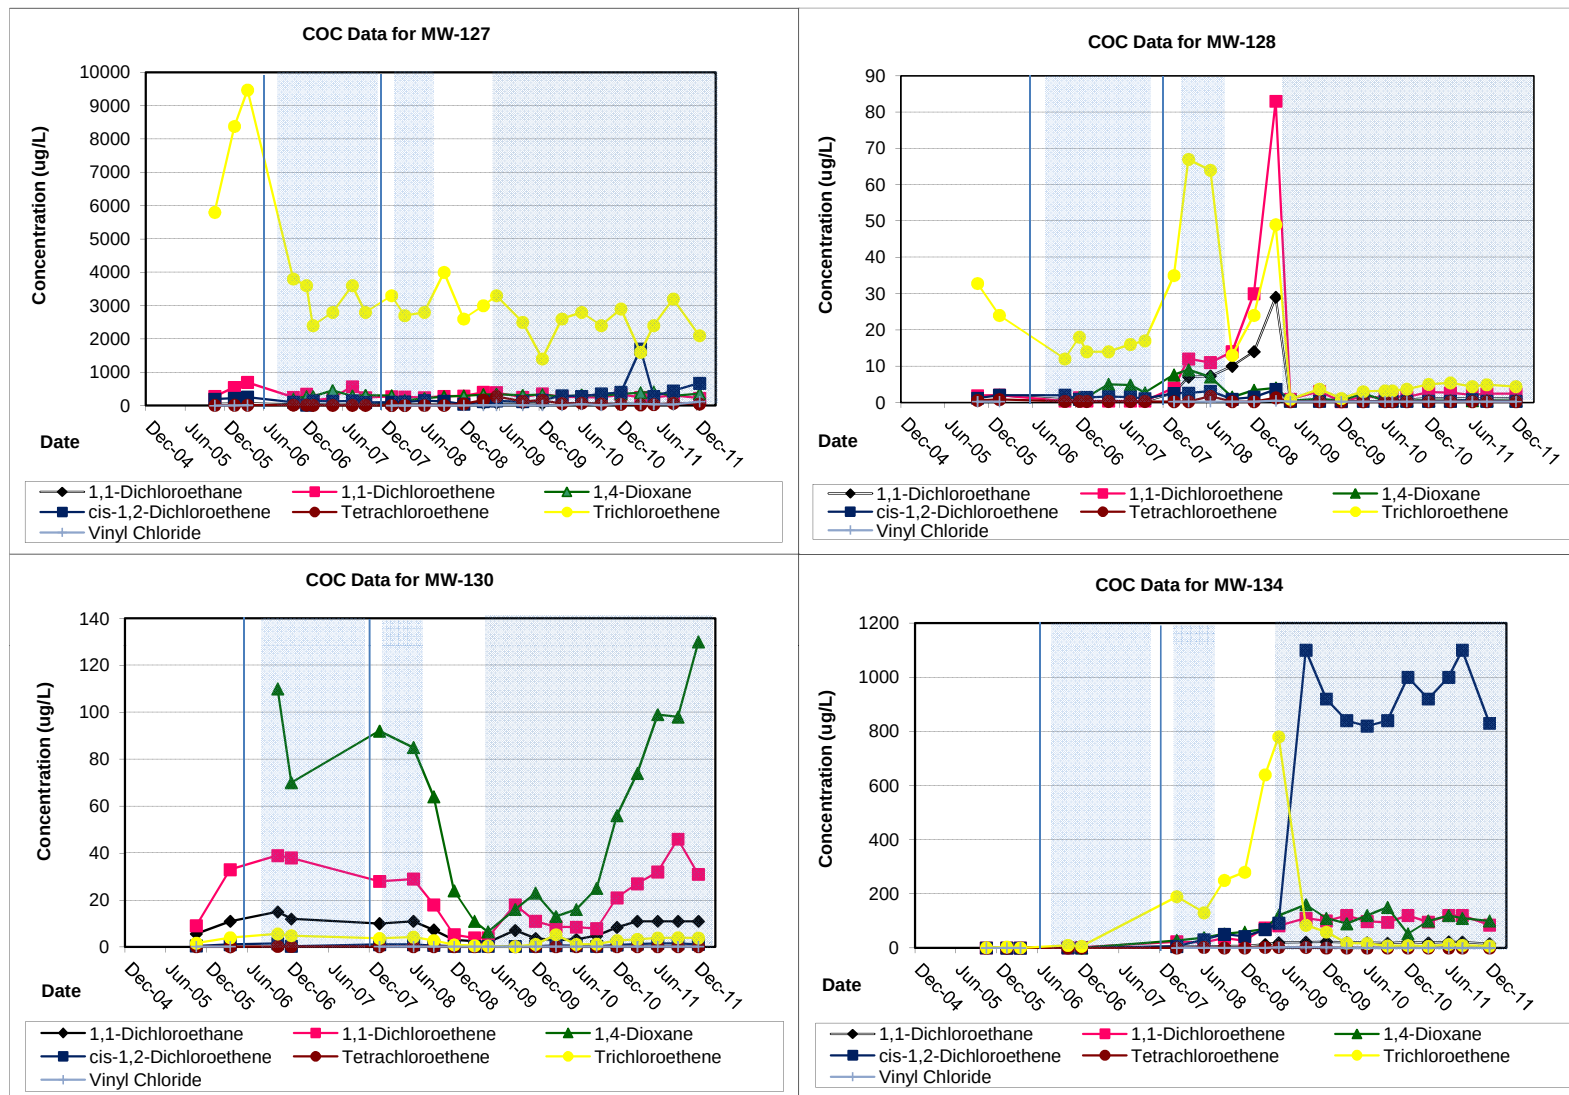

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.


Historical Concentration versus Time Graphs
Quarterly IAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

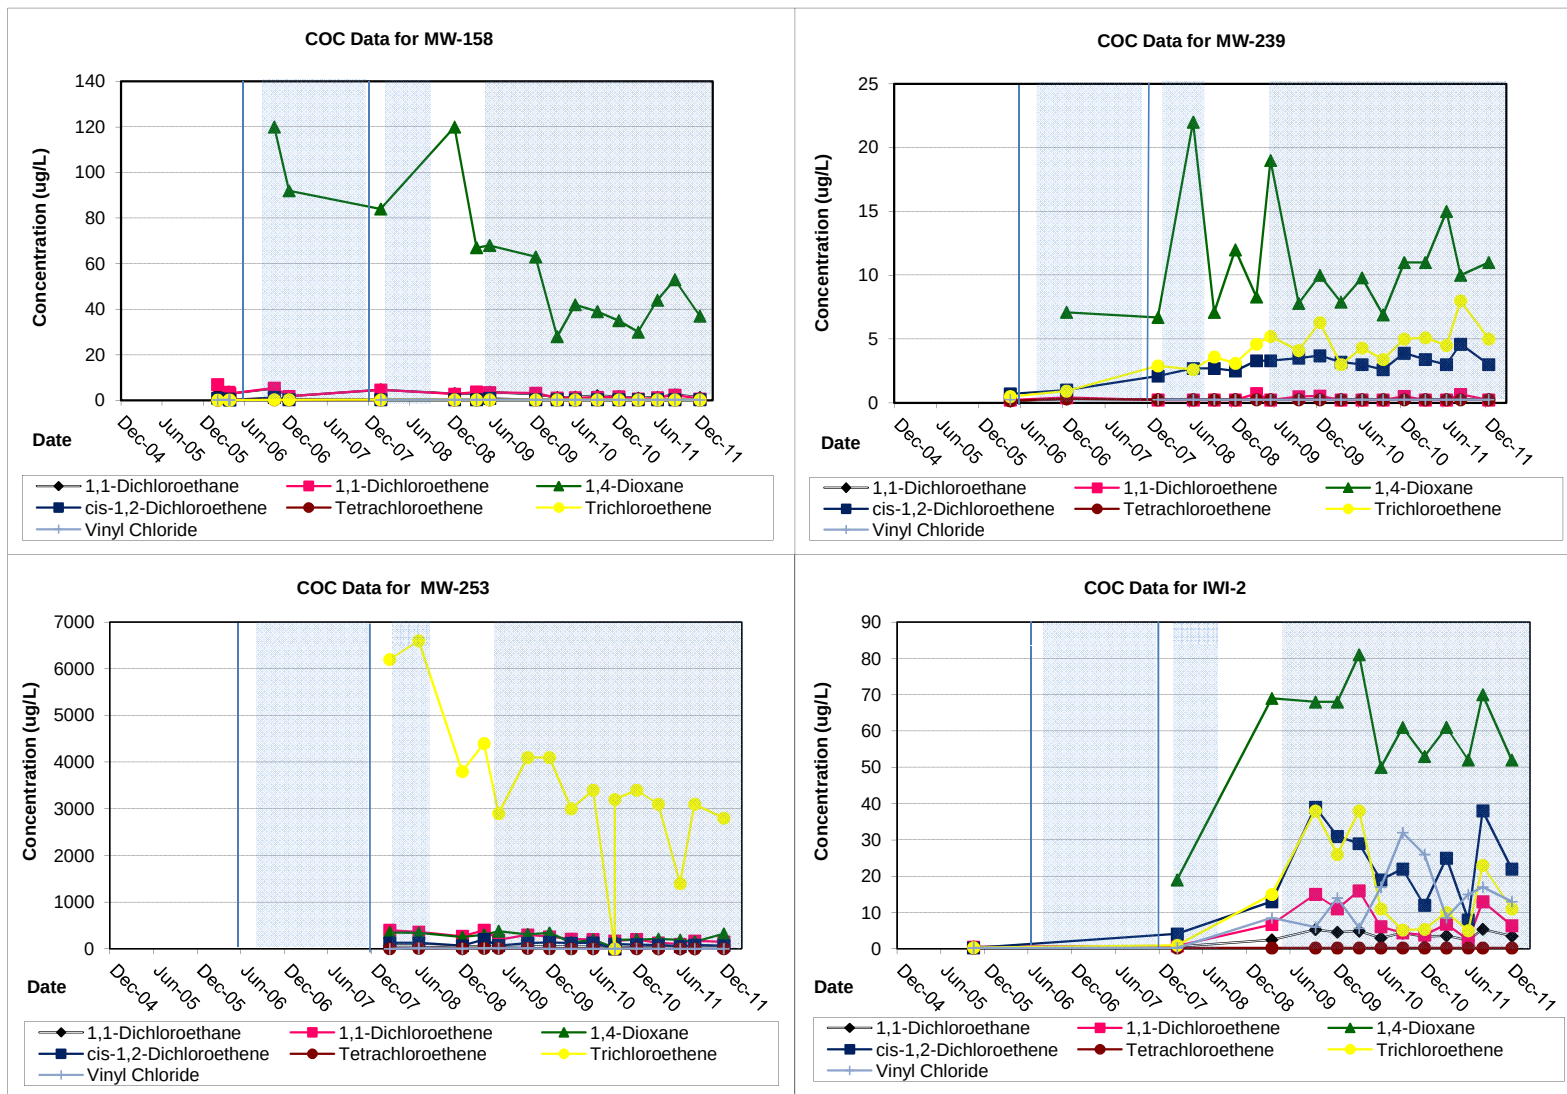

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.


Historical Concentration versus Time Graphs Quarterly IAS Zone Lockheed Martin Tallevast Site Tallevast, Florida

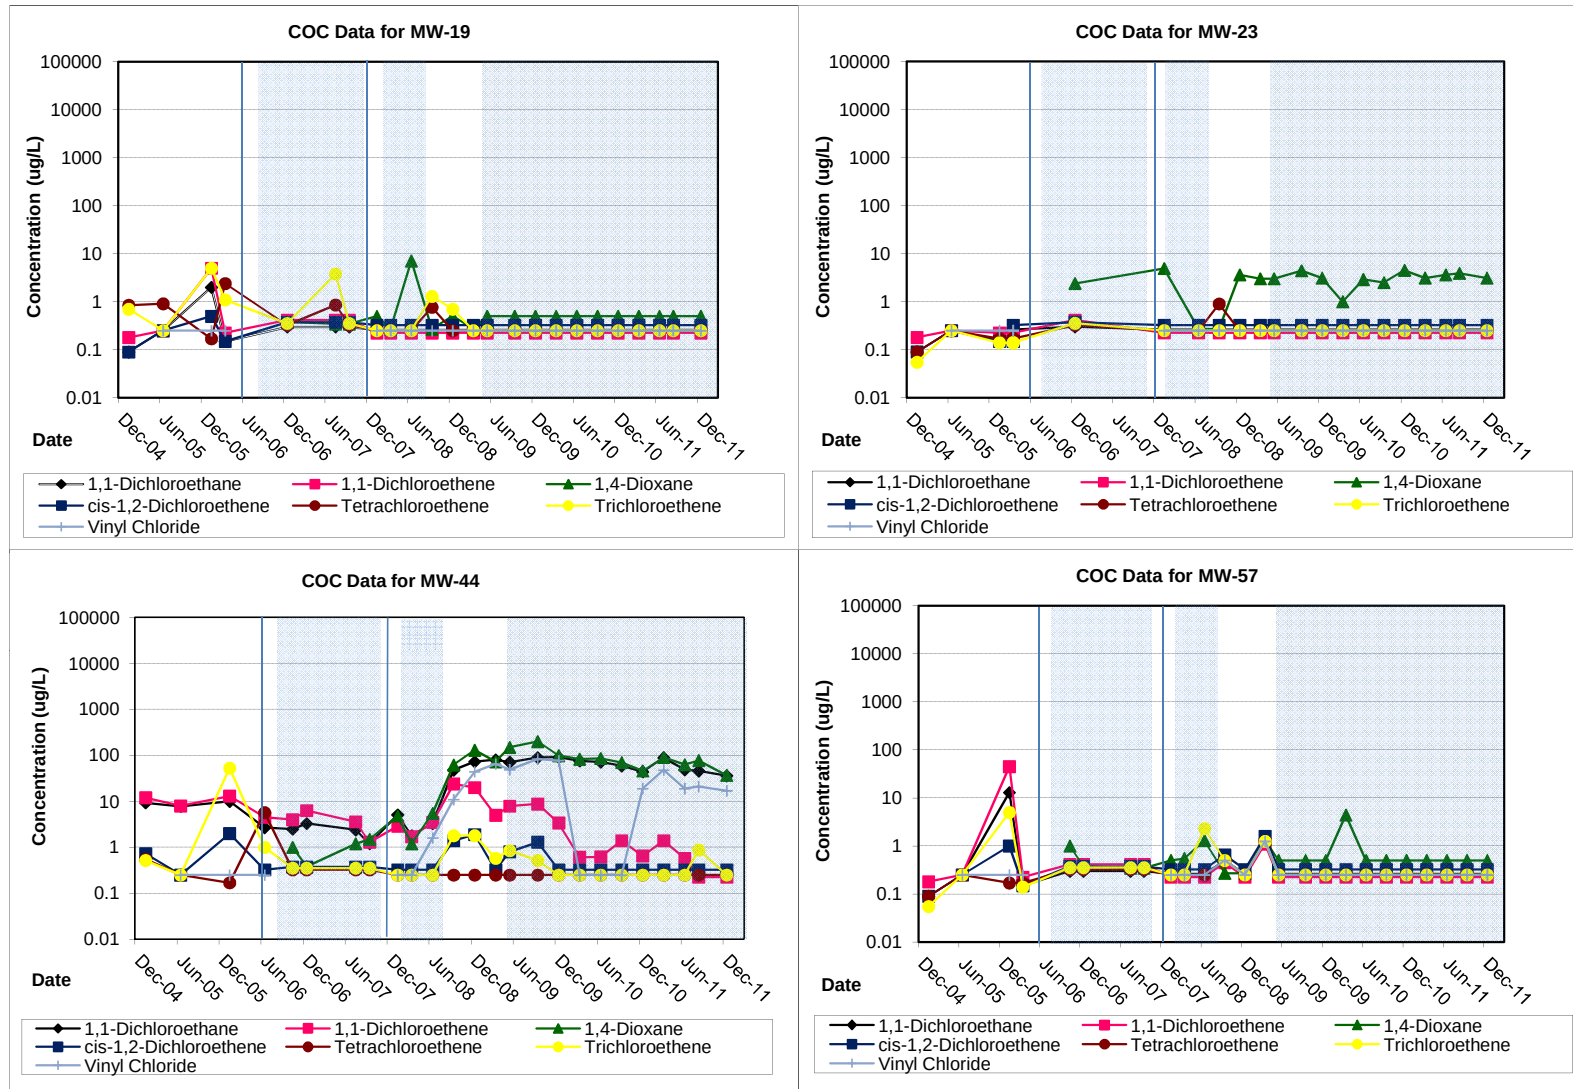

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.


Historical Concentration versus Time Graphs Quarterly IAS Zone Lockheed Martin Tallevast Site Tallevast, Florida

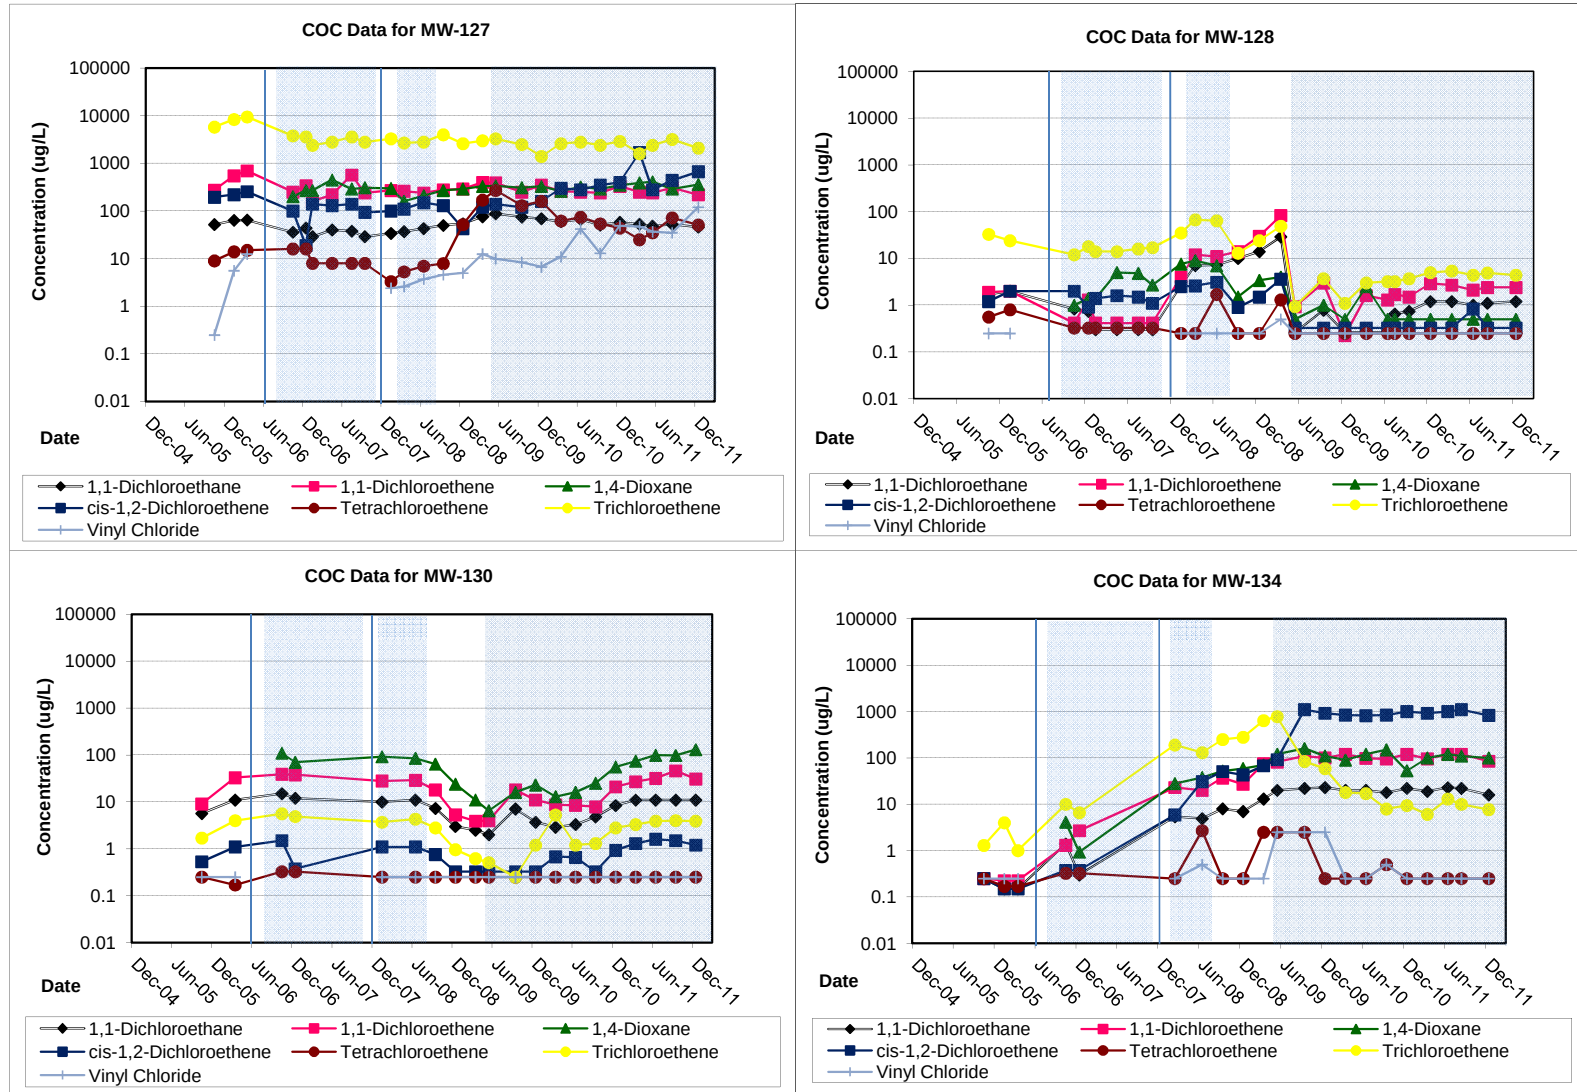

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
 Blue line indicate aquifer testing pumping events.
 See Legend for details.

Historical Concentration versus Time Graphs
Quarterly IAS Zone
Lockheed Martin Tallevast Site
Tallevast, Florida

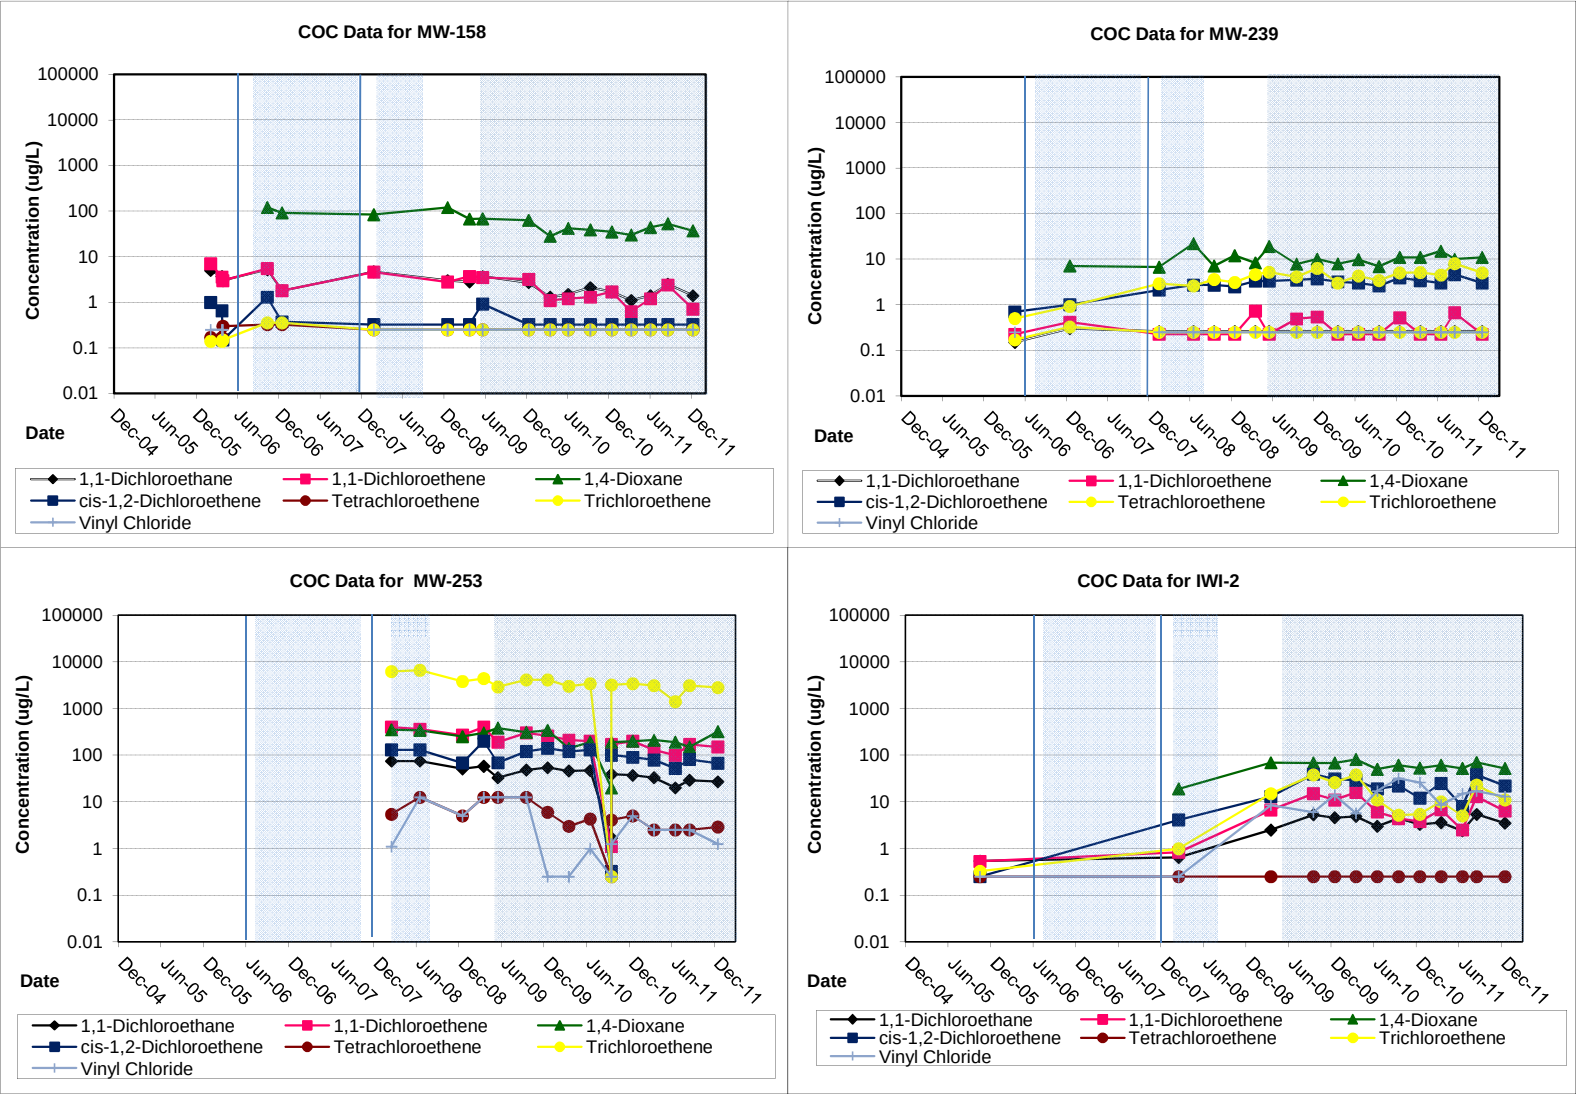

Notes:

Blue shading indicates time periods that the IRA treatment system was operating.
Blue line indicate aquifer testing pumping events.
See Legend for details.